



1885677


O-Gramercy Skirted Chair

Parts and Hardware List


A.	Back Assembly	1 pc
B.	Seat Assembly	1 pc
C.	Front Legs	2 pcs
D.	Long Allen Head Bolts	4 pcs
E.	Short Allen Head Bolts	6 pcs
F.	Flat Washers	10 pcs
G.	Lock Washers	10 pcs
H.	Allen Head Wrench	1 pc
I.	Optional Allen Head Screwdriver Bit	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.


Hardware Illustrations

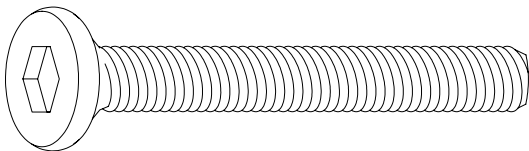


D. Long Allen Head Bolt

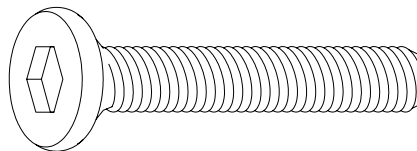

E. Short Allen Head Bolt



F. Flat Washer



G. Lock Washer

1885677

O-Gramercy Skirted Chair

Assembly Instructions

1. **Attach Seat Assembly (B)** Place Back Assembly (A) face up on a soft surface. Lay fabric chair skirt on back of chair. Lay the plain piece of fabric between the legs of Back Assembly (A). Insert the dowels in back apron under the Seat Assembly (B) into the pre-drilled holes in the rail of Back Assembly (A). Make sure the pre-drilled holes in the back apron under Seat Assembly (B) align with the pre-threaded holes in the rail of Back Assembly (A). Secure, but do not fully tighten, with Short Allen Head Bolts (E), Lock Washers (G) and Flat Washers (F) using Allen Head Tool (H or I). Adjust the Seat Assembly (B) and align the pre-drilled holes in back corner blocks under Seat Assembly (B) with the pre-threaded holes in legs of Back Assembly (A). Secure, but do not fully tighten, with Long Allen Head Bolts (D), Lock Washers (G) and Flat Washers (F) using Allen Head Tool (H or I). See illustration #1.
2. **Attach Front Legs (C)** Align the pre-threaded holes in the Front Legs (C) with the pre-drilled holes in front corner blocks under Seat Assembly (B). Secure, but do not fully tighten, with Short Allen Head Bolts (E), Lock Washers (G) and Flat Washers (F) using Allen Head Tool (H or I). See illustration #2.
3. **Adjust and tighten all bolts at this time. Cover underside of Seat Assembly (B) with plain piece of fabric.**
4. Put the chair upright. Place the chair skirt over the Seat Assembly (B). Make sure the skirt sticks to the front apron of chair. **Insert the knots of the strings on the skirts into the loops of other strings to fasten the skirts together.** See Illustration #3.

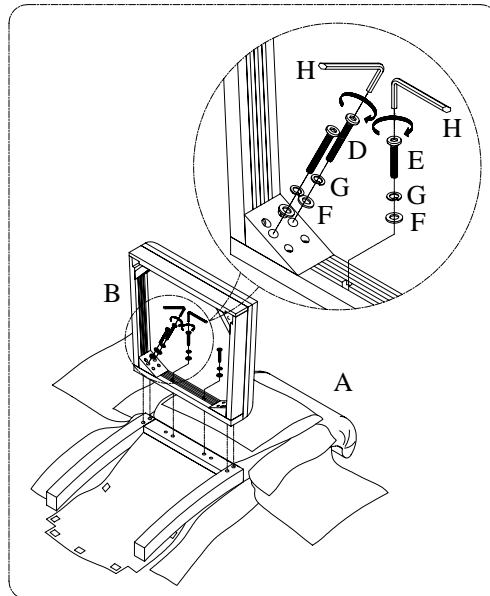


Illustration #1

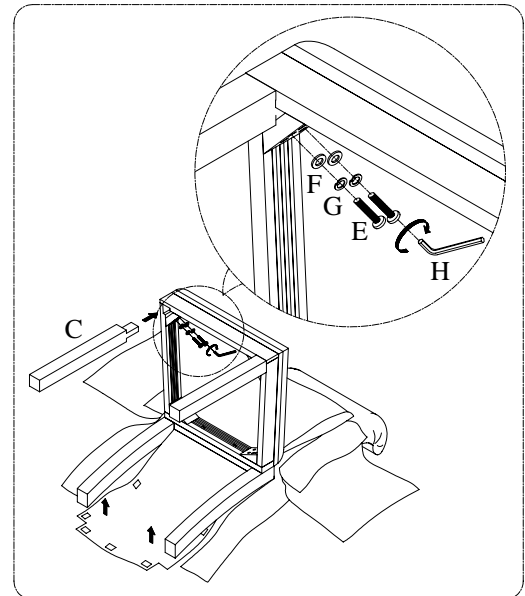


Illustration #2

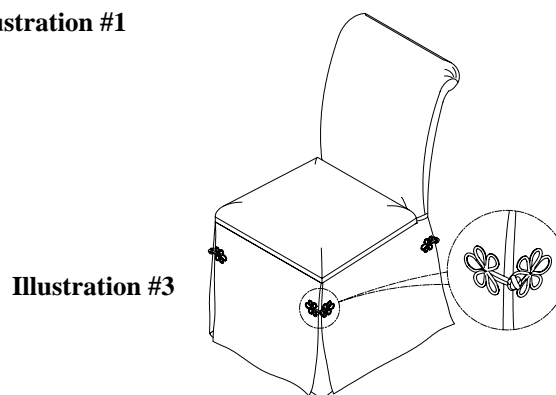


Illustration #3